


## **Instructions for People That Don't Read Instructions**

Thank you for your purchase of the 71-74 Rallye B Body Rallye Dash /Tach Decal Kit from **PremiumDashDecals.com!** Your kit comes with the following Decal:

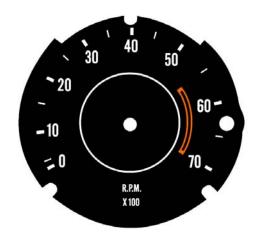

7174BR04

FIGURE 1 – Clock/Tach Refacing Kit Decals

## Basic Instrument Refacing Steps:

- 1) Disassemble Cluster and remove the Tach unit
- 2) Remove Tach Needle using a gentle counter clockwise twisting motion.
- 3) Ensure that the tach face is smooth, rust free through a light sanding
- 4) Paint faces with FLAT BLACK KRYLON spray paint
- 5) Paint tach needle flat indicator orange (exact match paint available from PremiumDashDecals.com
- 6) Install tach face by removing all but a tiny portion of the backing at the top of the decal. This will act as a handle. You can now lay the decal on the face and move it around until correctly located. It will only stick down when pressure is applied. If you make a mistake carefully peel back up the decal and reposition.



FIGURE w – Typical Installation techniques using decal backing as a "handle" (B Body Tic Toc Tach shown in this example)

- 7) Smooth decal down moving from center to edges only using a Kleenex tissue protected finger. This is especially important because these gauges are made with a concave curved shape. Failure to smooth from the center towards outside may result in wrinkles or creases. Once smoothed down, go around edges to ensure decal edges are set down tight to the face.
- 8) Reinstall tach indicator needle.
- 9) Reinstall unit into cluster

Difficulties or Questions? Contact tech support: support@PremiumDashDecals.com 613-532-2587

A much more complete and thorough Installation Guide can be downloaded from the *PremiumDashDecals.com* website from the *SUPPORT* section

Other products available from **PremiumDashDecals.com** for this instrument are:

- Exact match flat fluorescent orange needle paint
- Full tach repair and calibration available from PremiumDashDecals.com